




HORSTMANN

ChannelPlus H17XL Series 2 User Operating Instructions

Single Channel 7 day Timeswitch

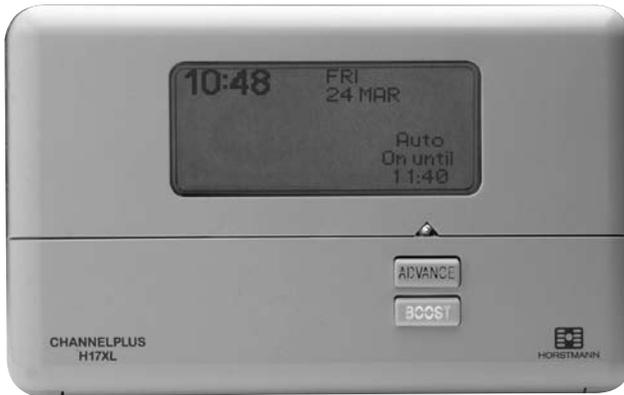

The ChannelPlus family of electronic programmers offer a range of advanced features coupled with simplified 'menu driven' programming all designed to help save energy.

The Horstmann ChannelPlus H17XL series 2 is a single channel timeswitch allowing up to 3 On/Off settings per day for each day of the week.

For day to day operation the H17XL has a manual 1 or 2 hour boost button as well as an advance button to bring forward the next programmed operation.


The back lit display, automatic clock and menu driven programming are all features designed to make the operation of the ChannelPlus H17XL as simple as possible to use.

All series 2 ChannelPlus programmers are direct replacements for earlier ChannelPlus models.

The ChannelPlus H17XL Series 2 Timeswitch

The simple instructions contained in this user guide are designed to help with the programming and operation of the unit. Most of the following instructions require the front flap to be lowered. Please replace the flap when normal operation is required.


PRODUCT OVERVIEW - DETAIL SHOWN WITH THE FLAP LOWERED

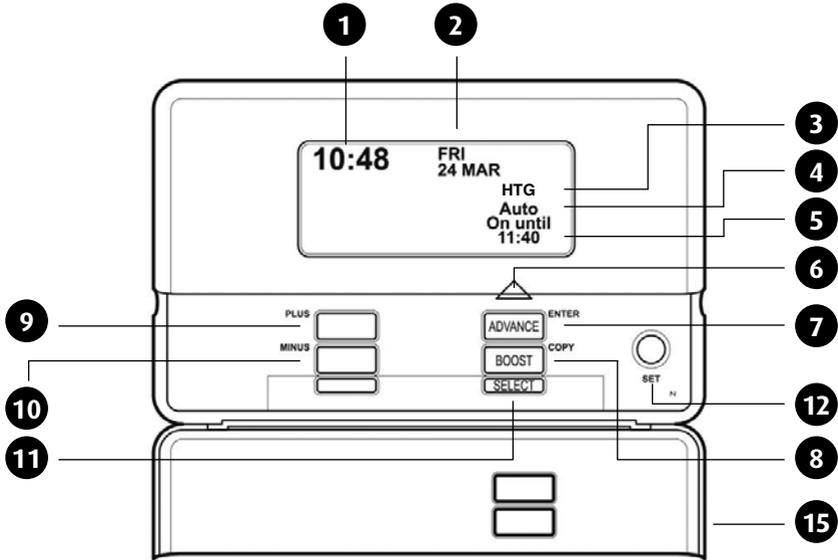

- 1 Current time of day
- 2 Day of week and date
- 3 Channel Heading
- 4 Current Channel programme
- 5 Next On/Off time
- 6 Channel ON indicator
- 7 ADVANCE and ENTER button ILLUMINATED WHEN ACTIVE
- 8 BOOST and COPY button ILLUMINATED WHEN ACTIVE
- 9 PLUS button
- 10 MINUS button
- 11 Programme Select buttons (Coloured Blue)
- 12 SET button (Coloured Green)
- 13 Front Flap (Lowered)

Display Information

The ChannelPlus H17XL Series 2 timeswitch has a fully graphical, back-lit display. The information displayed will change depending upon the settings made and which mode you are in. During different programming modes and/or setting screens the current time, day/date, holiday indicator will only appear when necessary, this is to reduce confusion during the programming process. This is explained further in later sections of this guide.

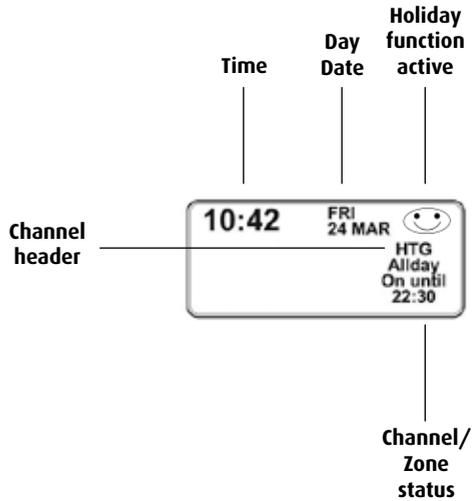

ACTIVATING THE BACK-LIT DISPLAY

The display will illuminate for approximately 1 minute whenever a button is pressed.

To illuminate the display for viewing purposes only press the green menu button under the front flap twice.

SETTING AND ADJUSTING

When setting or adjusting, the timeswitch will automatically return to the running mode if no buttons are pressed for approximately 1 minute.

If the setting or adjusting has not been finished, please start the procedure again.


TIME OF DAY

The ChannelPlus H17XL incorporates a factory set clock and calendar which means that no adjustments should be necessary to the time of day and BST/GMT time changes take place automatically.

Manual Overrides


BOOST FUNCTION - 1 OR 2 HOUR TEMPORARY OVERRIDE

The boost facility will allow the user to either activate a channel which is currently 'OFF' for 1 or 2 hours, or to extend a current 'ON' period by 1 or 2 hours. To indicate the boost being activated the 'BOOST' button under the selected channel will stay illuminated for the duration of the boost/extension period. The display will also indicate the extension to the time visually on the display.

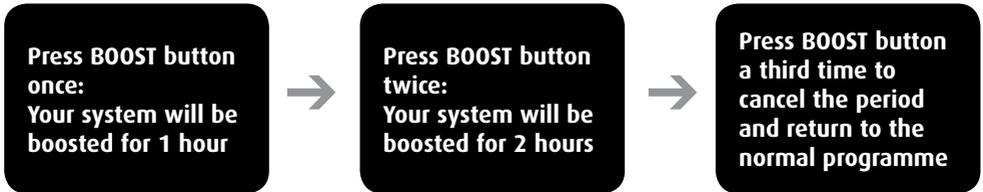

ADVANCE FUNCTION - BRINGS FORWARD THE NEXT ON OR OFF OPERATION

The advance facility will allow the user to either bring a timeswitch 'ON' which is currently 'OFF' or switch a timeswitch 'OFF' which is currently 'ON'. To indicate the advance feature being activated the 'ADVANCE' button will stay illuminated until the next programme switching time, the user display will change to also indicate the status of the timeswitch and the next switching time.

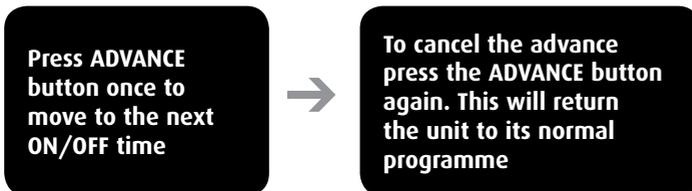

Programme Override Facilities


With the ChannelPlus H17XL Series 2 timeswitch operating in the normal running mode it is possible to alter the functionality of the programme by means of the blue 'select' buttons under the front flap.

The options include;

- AUTO** - Timeswitch output follows all programmed 'ON' and 'OFF' times.
- ALL DAY** - Timeswitch output operates from 1st 'ON' time until 3rd 'OFF', ignoring all switching times in between.
- ON** - Timeswitch output will be constantly 'ON'.
- OFF** - Timeswitch output will be constantly 'OFF', there is the ability to turn off heating during summer without altering the programme times. 1 or 2 hour boost still available.

All of the settings above will be permanent, i.e. unaffected by programme times, until alteration by the user.

The diagram below illustrates how to alter the setting, it assumes that the timeswitch is in the AUTO mode to begin with.

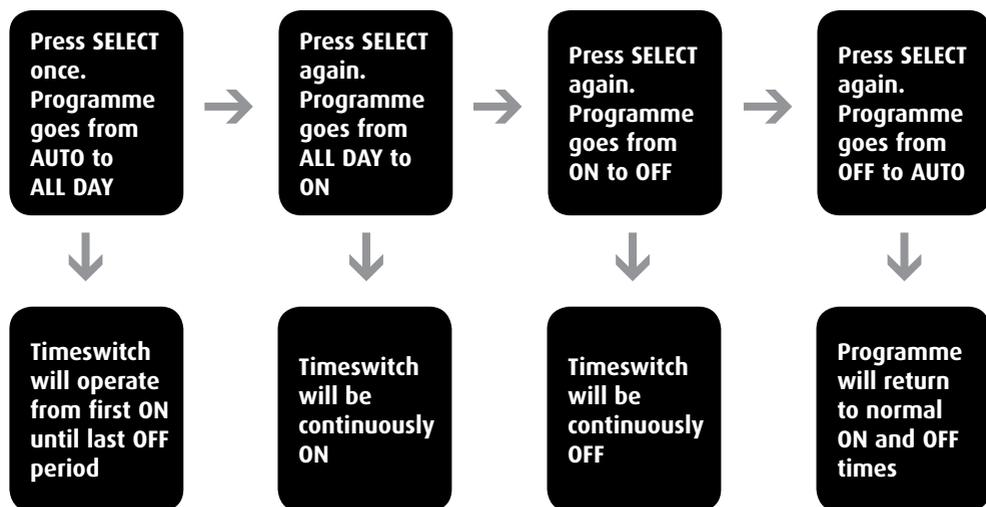


Setting the Programme Times

The programme times have been preset as shown in the chart below.

DEFAULT TIME SETTINGS - AM/PM


	1st ON	1st OFF	2nd ON	2nd OFF	3rd ON	3rd OFF
Mon - Fri	6.30AM	8.30AM	12.00PM	12.00PM	4.30PM	10.30PM
Sat/Sun	7.30AM	10.30AM	12.00PM	12.00PM	5.00PM	11.00PM

If any changes are required to the programme times please complete the operation as described in the flowchart left.

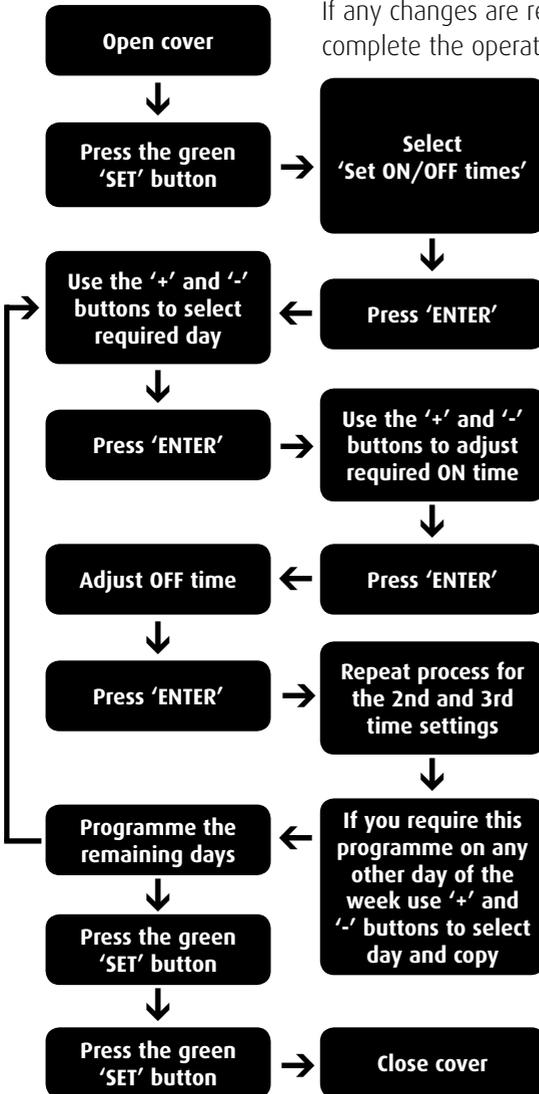

SAMPLE DISPLAYS


Select 'Set ON/OFF times'

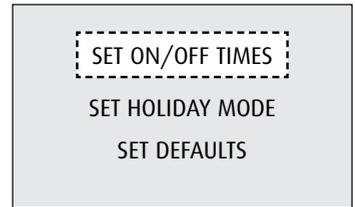

Select the day to set



Enter the required on and off times

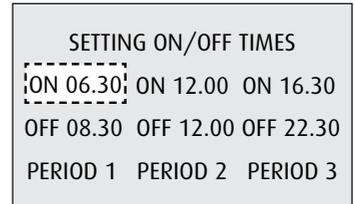

ADJUSTING SETTINGS

When carrying out any alterations to the programmed times and settings the programmer will return to its normal run mode in 1 minute if no adjustments are made in that time.

Setting the Holiday Mode

The holiday mode can be used to suspend the program function of the ChannelPlus timeswitch, it can be set in advance of your departure date and for as long a period as required. The holiday function operates from mid-day to mid-day, this means it can be easily set to ensure your home is warm for your return. When the holiday mode has been set a smiley face 😊 will appear on the display. When the holiday mode is active only the day/date and smiley face will be displayed.

To cancel an active holiday period please press any of the Select buttons under the front flap.

PLEASE NOTE: Any alteration to the current time or date will cancel any Holiday programme set.



N.B. Do not use the holiday programme when conditions are such that frost damage to the heating system is possible (unless a frost protection thermostat is fitted to your system).

SAMPLE DISPLAYS

Enter Holiday Dates



Display when Holiday Mode is set

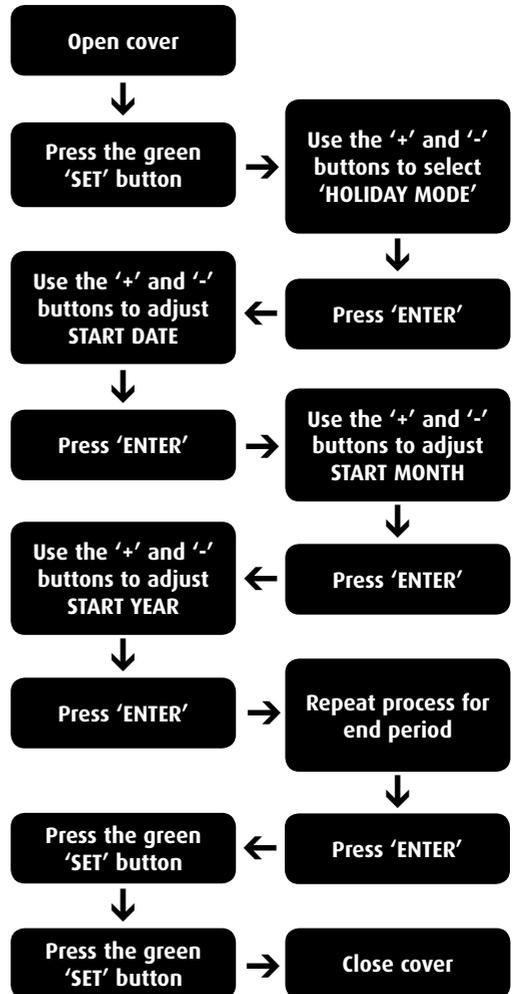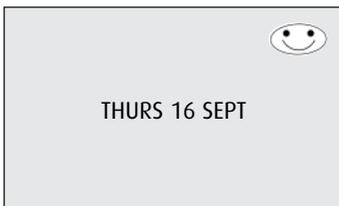


Adjusting Default Settings

The ChannelPlus H17XL Series 2 has a number of default settings which are normally installed. These settings are designed to reduce the need for user intervention upon installation of the timeswitch. However it is possible to customise the user display by following the procedures in the following pages. The factory default normally installed are illustrated below;

Time and Date

Time and calendar are factory set

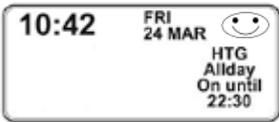


Clock Options

Time displayed in 24hr clock format



Headings

Channel heading set to standard installation i.e. Heating, Hot Water or None

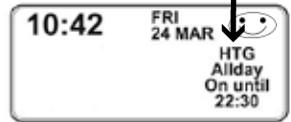

Options

The timeswitch has been set with the current time and date during manufacture. No alteration should be required to the time and date. However, if any modification is required please refer to the flowchart on page 9

Options

24 hour
or
AM/PM


Options

None
Heating
Water




Adjusting Time and Date

The ChannelPlus H17XL Series 2 timeswitch has been set with the current time and date during manufacture. No alteration should be required to the time and date, however if any modification is required please refer to the flowchart below.


PLEASE NOTE: Any alteration to the current time or date will cancel any Holiday programme set. It will also cause any Boost or Advance operations to be cancelled.

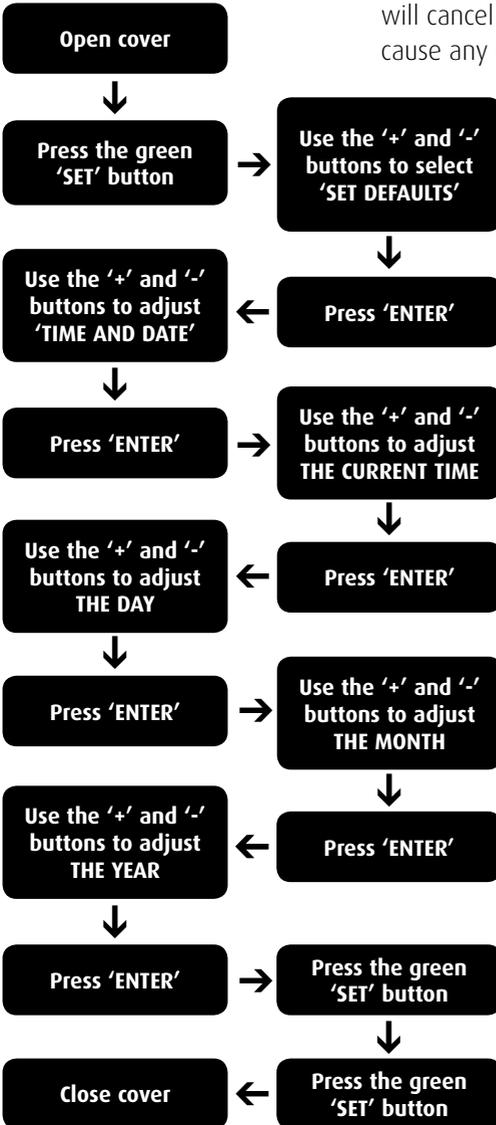

SAMPLE DISPLAYS

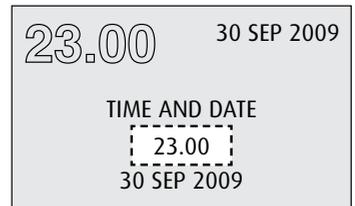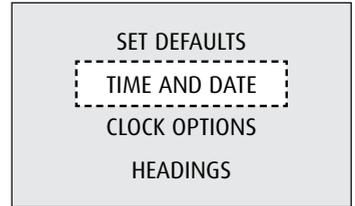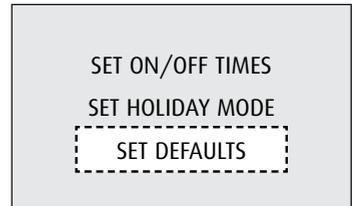


Adjusting Clock Options

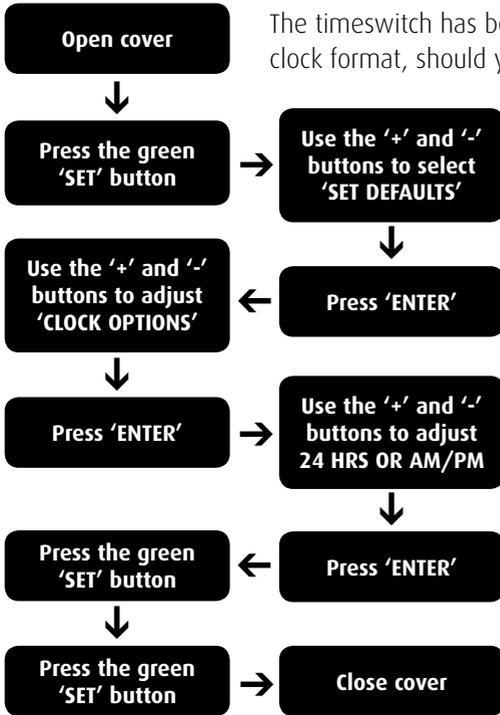

The timeswitch has been preset to display the time in 24 hour clock format, should you prefer AM/PM format then please use the procedure given in the flowchart opposite.

SAMPLE DISPLAYS

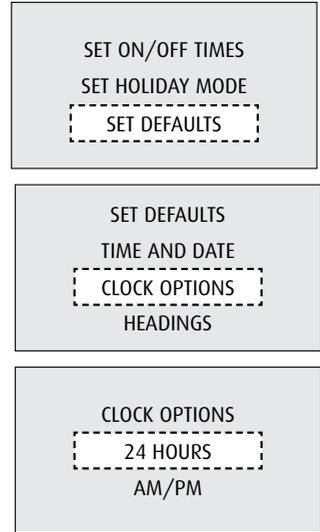

General Information

BATTERY

The timeswitch is fitted with a non-rechargeable, non-serviceable long life battery, which will maintain the clock and programmed time settings with the mains supply disconnected.


THIS RESERVE SHOULD BE SUFFICIENT TO COVER POWER INTERRUPTIONS DURING THE LIFE OF THE UNIT.

During power interruptions the display will be blank.

SERVICE AND REPAIR


This timeswitch is NOT user serviceable. Please do not dismantle the unit. In the unlikely event of a fault developing please refer to the **RESETTING THE CHANNELPLUS H17XL** section on the right. If this fails to resolve the problem please contact a local heating engineer or a qualified electrician.

Adjusting Channel Headings

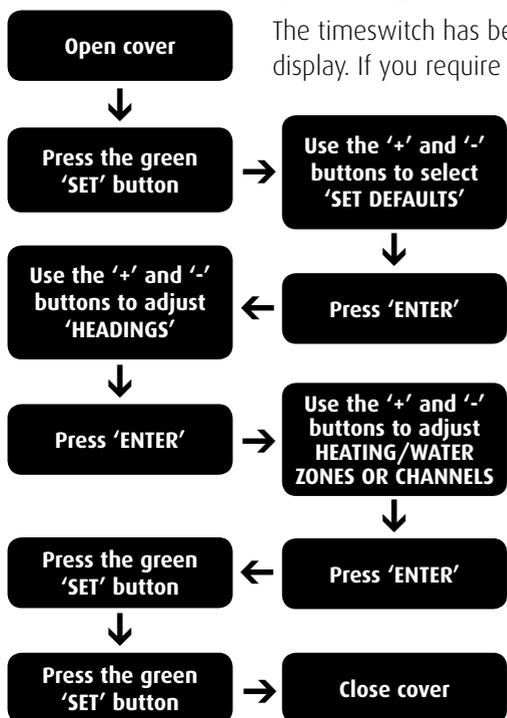

The timeswitch has been preset without a channel heading on the display. If you require either the 'Water' or 'Heating' options then please follow the flowchart opposite.

SAMPLE DISPLAYS

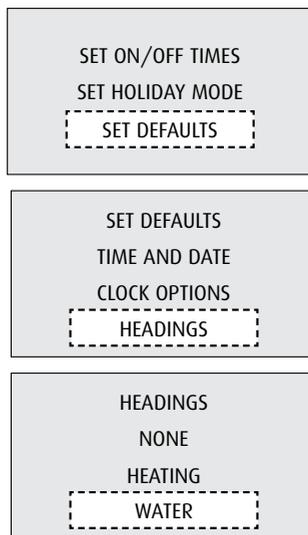

General Information


RESETTING THE CHANNELPLUS H17XL SERIES 2

Electronic equipment can in some circumstances be affected by electrical interference. If the display becomes frozen or scrambled; or if you wish to revert back to the default settings please use the following procedure:

RESET PROCEDURE

PLEASE NOTE: Using this procedure will restore the ChannelPlus to the original factory programme settings, the time setting will remain correct.

Lower the front flap of the unit. On the right hand Channel press the ADVANCE (Enter) and SELECT (Blue) buttons together, then release and the programmer will return to the preset factory settings.

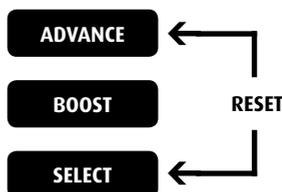

What is a programmer?

... an explanation for householders.

Programmers allow you to set 'On' and 'Off' time periods. Some models switch the central heating and domestic hot water on and off at the same time; while others allow the domestic hot water and heating to come on and go off at different times.

Set the 'On' and 'Off' time periods to suit your own lifestyle. On some programmers you must also set whether you want the heating and hot water to run continuously, run under the chosen 'On' and 'Off' heating periods, or be permanently off.

The time on the programmer must be correct. Some types have to be adjusted in Spring and Autumn at the changes between Greenwich Mean Time and British Summer Time. You may be able to temporarily adjust the heating programme, for example, 'Override', 'Advance' or 'Boost'. These are explained in the manufacturer's instructions.

The heating will not work if the room thermostat has switched the heating off. And, if you have a hot-water cylinder, the water heating will not work if the cylinder thermostat detects that the hot water has reached the correct temperature.

The above explanation also applies to your timeswitch, which operates as a single circuit programmer.



HORSTMANN

Email: sales@horstmann.co.uk
Website: www.horstmann.co.uk

Horstmann Controls Limited, Bristol BS4 1UP

